



Quick CD Installation Guide

You will need the following hardware – Any x86 motherboard and minimum pentium 133mhz CPU, a minimum of 64 meg of RAM, 2 network cards, Hard Drive, CD-ROM, floppy drive.

1. Configure one of your computers for DHCP and reboot the computer or renew the IP or you can set a static address on your workstation such as 192.168.0.2 using subnet mask of 255.255.255.0 and gateway as 192.168.0.1.
2. Make sure your server has two network cards. One is connected with local network, another with Internet (Cable Modem or DSL Modem) If a connection is not found reverse the cables.
3. Power on the server
4. Make sure the server is set to boot from the CD-ROM first (See the BIOS) The HD must be on installed on the Primary Master and the CD-ROM must be set to master on Secondary IDE controller.
5. Insert the Realm1000 installation CD-ROM into CD drive
6. Reboot
7. You will be prompted "boot:", just press Enter
8. You will be prompted to partition the disk, press "y" and press Enter. A few minutes will pass as the system has the HD formatted, partitioned and copies the system files.
9. You will be prompted to select a CPU type. Select your type number and press Enter
10. You will be prompted to remove the CD and reboot.
11. The installation of server is now completed.
12. From the client computer you configured in step 1, launch a WWW browser.



13. Access <https://192.168.0.1>, and you will be asked to accept the security certificate, just press yes you will need your serial key at this point and answer the following setup questions.
14. You get a login prompt, the user name is realmadmin, password is password
15. Now you enter the administration interface.
16. Enter menu "Network Services"->"Host Settings"
17. You can change the domain name
18. From Network settings, select "Change Connection Type", then select your connection type, press "Change Connection Type".
19. If you use DHCP, select "Yes" and press "Next"
20. Input your CR Number and Domain not required in Canada, if you don't know, leave them blank. Press "Commit New Connection Type" and "Modify Current Connection Settings".
21. Enter menu "System Maintenance"->"Reboot", Press "Reboot" and "Yes".
22. The server will reboot and get its Internet IP address.
23. Now you can configure your client computers using DHCP to get IP address. They will be able to access the Internet.
24. If you need to configure other things, access <https://192.168.0.1> again. You can get help from the "Help" menu.
25. Now enjoy your Realm1000 network.

For Technical Support, e-mail support@realmnetworks.com
or telephone (613) 744-3401